



1



Connect the battery to the charger and plug in every day after use or when the battery discharge indicator displays red.

**⚠ WARNING**

Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away. Keep covers open when charging.

**⚠ AVERTISSEMENT**

Les batteries émettent de l'hydrogène. Ce gaz est susceptible d'exploser ou de s'enflammer. Évitez toute étincelle et toute flamme nue à proximité des batteries. Laissez les capots ouverts pendant la mise en charge.

**⚠ ADVERTENCIA**

Las baterías emiten hidrógeno gaseoso. Existe peligro de incendio o explosión. Mantenga chispas y llamas alejadas de la máquina. Mantenga las tapas abiertas durante la operación de carga.




✓ Raise the battery cover when charging.

✓ Charge batteries in a well-ventilated area at room temperatures.



✓ Let the battery fully charge before next use.

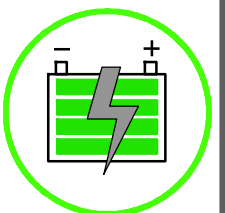

✓ Leave batteries connected to the charger during weekends, holidays, and other off-days.

*NOTE: Check water levels in the battery cells before leaving the battery connected for a prolonged period of time to ensure a cell is not damaged due to lack of water.*

*NOTE: Lead Acid batteries do not have a memory effect and do not have to be completely drained before charging.*

ON- Board

OFF- Board

2



✓ Confirm the charger shows the charge complete flag (green LED) before next use.

✓ Check the battery water level weekly when fully charged.

3



✓ If the charger goes into any error code (e.g. E02), report it to your Tennant Service Representative.

